

Detailed Programming Instructions for SoundNet Operations

Phone has been preset to Standard SmartPhone V Operation.

On-Board Programming

Step 1. Begin Program Mode

- A. Press **Enter**

Step 2. System Operation (Either A or B)

- A. For SoundNet Press **1, 9, Enter, 6**
B. For Standard Operation Press **1, 9, Enter, 1**

Step 3. Program Emergency Numbers

- A. Press **1, Enter**, (Phone Number), **Stop**
B. If SoundNet Press **2, 1, Enter**, (11-Digit Code), **Stop**
Note: Press 2-5 in Step 3A for Emergency Numbers 2-5 As Needed

Step 4. If Ring Down (No Dial Tone) (Skip Step 3)

- A. Press **1, Enter, Pause, Stop**
B. Press **9, Enter, 0**

Step 5. Program Call Tracker Message


- A. To Turn On Message Press **1, 3, Enter, 2**
B. Press **6, Record**, (Speak Your Message), **Stop**
(To Replay Message Press **6, Play**)
C. Program Frequency of Message Press **1, 3, Enter, _**
1= Plays Message (1) Time
2= Plays Message (2) Times (Default)
3= Plays Message Until Receiving Party Presses *
On Their Phone
D. For No Message Press **1, 3, Enter, 0**

Step 6. Change Telephone Security Code (Default 1111)

- A. Press **2, 2, Enter**, (Desired 4-digit code)
Note: Cannot be 0000

Step 7. To Exit Program Mode

- A. Press **Stop** For 3 Seconds

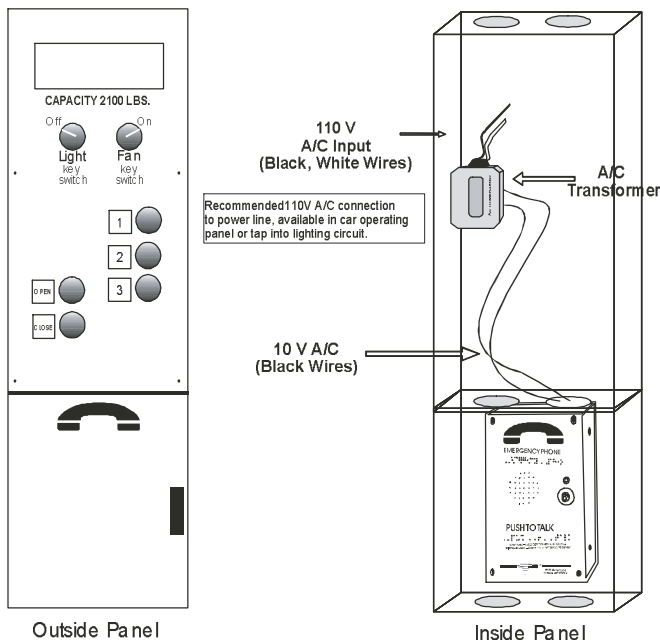

SmartPhone V Consolidator Feature

Step 1. Begin Program Mode

- A. Press **Enter**

Step 2. Program ID Numbers for Phones 1-5

- A. Press **7, Enter**
B. Press *****, **1-5** for Corresponding Elevator (1-5)

Step 3. Program ID Numbers for Phones 6-10

- A. Press **7, Enter**
B. Press **#**, **1-5** for Corresponding Elevator (6-10)

Step 4. Confirm Consolidator Operation

- A. Dial Phone Number SmartPhones are Installed on:
All Phones Will Answer
B. To Select Individual Phone
Press ***1** (Phone #1) Press **#1** (Phone #6)
Press ***2** (Phone #2) Press **#2** (Phone #7)
Press ***3** (Phone #3) Press **#3** (Phone #8)
Press ***4** (Phone #4) Press **#4** (Phone #9)
Press ***5** (Phone #5) Press **#5** (Phone #10)
Press ***0** (All Phones)

Step 5. To Exit Program Mode

- A. Press **Stop** For 3 seconds

Remote Programming

Step 1. Begin Program Mode

- A. Call Into Phone
B. After 1st Simulated Ring Press **#, #**
C. Key in Security Code (Default is **1111**)

Step 2. System Operation (Either A or B)

- A. For SoundNet Press **1, 9, *, 6**
B. For Standard Operation Press **1, 9, *, 1**

Step 3. Program Emergency Numbers

- A. Press **1, ***, (Phone Number), ***, #**
B. If SoundNet Press **2, 1, ***, (11-Digit Code), ***, #**
Note: Press 2-5 in Step 3A for Emergency Numbers 2-5 As Needed

Step 4. If Ring Down (No Dial Tone) (Skip Step 3)

- A. Press **1, *, #, *, *, #**
B. Press **9, *, 0**

Step 5. Program Call Tracker Message

- A. To Turn On Message Press **1, 3, *, 2**
B. Press **6, ***, (Speak Your Message), **#, *, #**
(To Replay Message Press **6, #**)
C. Program Frequency of Message Press **1, 3, *, _**
1= Plays Message (1) Time
2= Plays Message (2) Times (Default)
3= Plays Message Until Receiving Party Presses *
On Their Phone
D. For No Message Press **1, 3, *, 0**

Step 6. Exit Program Mode

- A. Press ***, #, 0** (You will hear Beep, Beep) ***, #**