

2400 SERIES SPEAKER PHONES

Simplified Programming Instructions

Phone has been preset to Ring down phone systems with a 5 min. conversation. The following steps can be done in any order.

1. Programming Telephone Numbers

- Press and hold START
- Press and release the pushbutton on the front of the speaker phone
- The LED on the front of the phone will light
- Release the START key. You will hear "beep-beep"
- Press M1
- Dial the telephone number
- Press STOP, you will hear "beep-beep"
- The LED on the front of the phone will shut off


2. Programming Timer

- Press and hold START
- Press and release the pushbutton on the front of the speaker phone
- Press SET, SET
- Enter the number of minutes you wish to talk
- Press STOP, you will hear "beep-beep"
- The LED on the front of the phone will shut off

3. Ring – Down Telephone Line Programming

- Press and hold START
- Press and release the pushbutton on the front of the speaker phone
- Press SET, SET
- Press SET, M1
- Press PAUSE
- Press STOP, you will hear "beep-beep"
- The LED on the front of the phone will shut off

Security

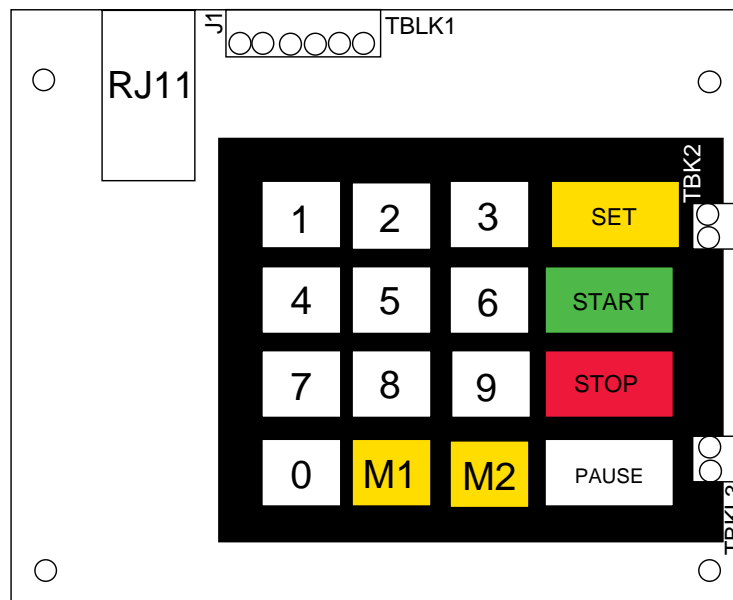

We're There for You!

TOLL FREE TECHNICAL SUPPORT 1-800-451-1460 EXT. 3



N56 W24720 N. Corporate Circle, P.O. Box 306 Sussex, Wisconsin 53089

800-451-1460 FAX 262-246-4828

Web site: www.rathmicrotech.com

Sales: info@rathmicrotech.com

Tech Support: help@rathmicrotech.com